

Note: These instructions are for CyberKeys with replaceable batteries.

### Step 1

Use a ball-point pen to depress the upper lobe of one of the latches which holds the battery cap in place.



### Step 2

Lift the battery cap up, then toward the latch on the opposite side.



### Step 3

After replacing the battery, hook one side of the battery cap onto a latch, then snap the opposite end into place over the other latch.

